


## 11. Operating Instructions


### 11-1 Name of Each Part

#### 11-1-1 Indoor Unit


The design and shape are subject to change according to the model.

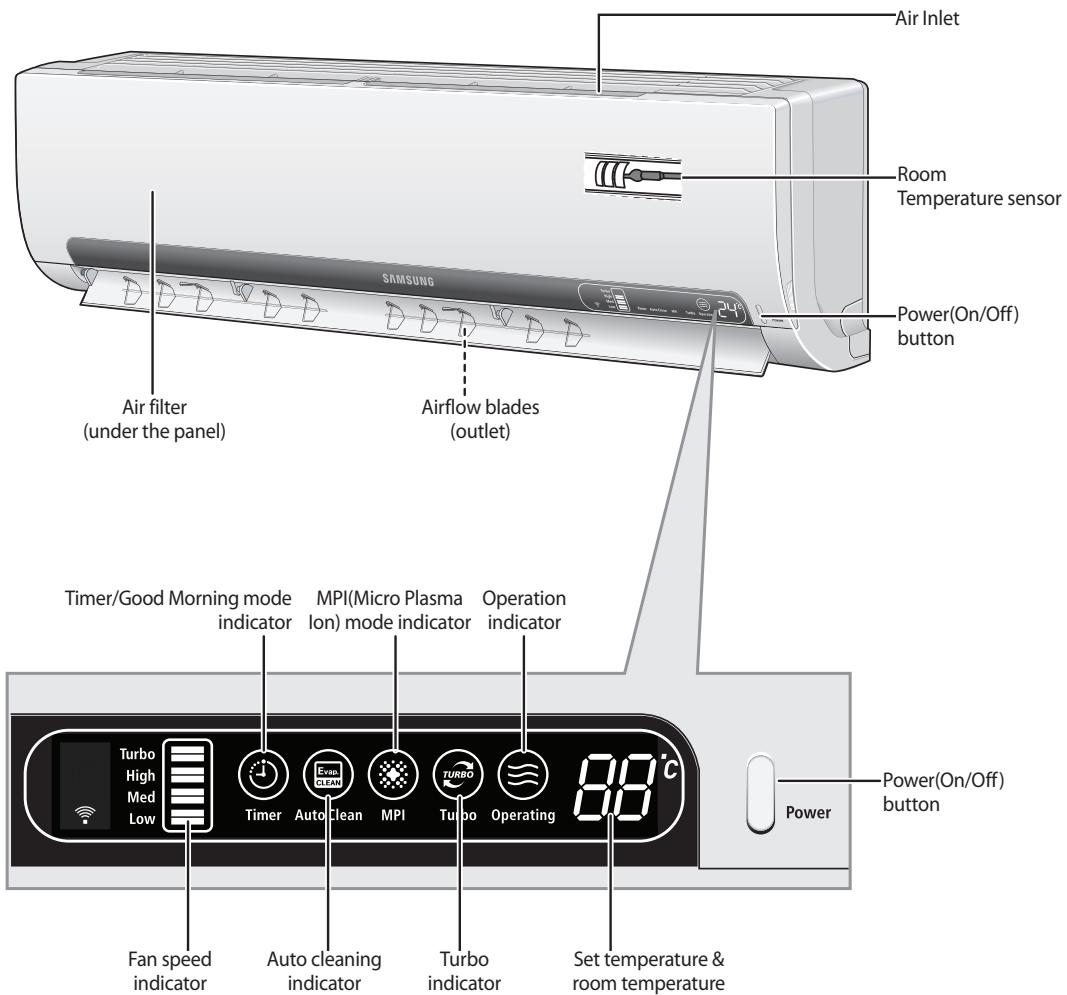

### 11-1-2 Outdoor Unit

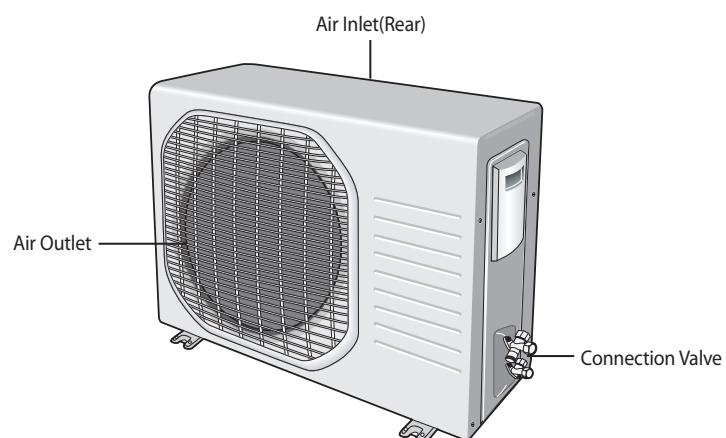

## 11-2 Wireless Remote Control-Buttons and Display


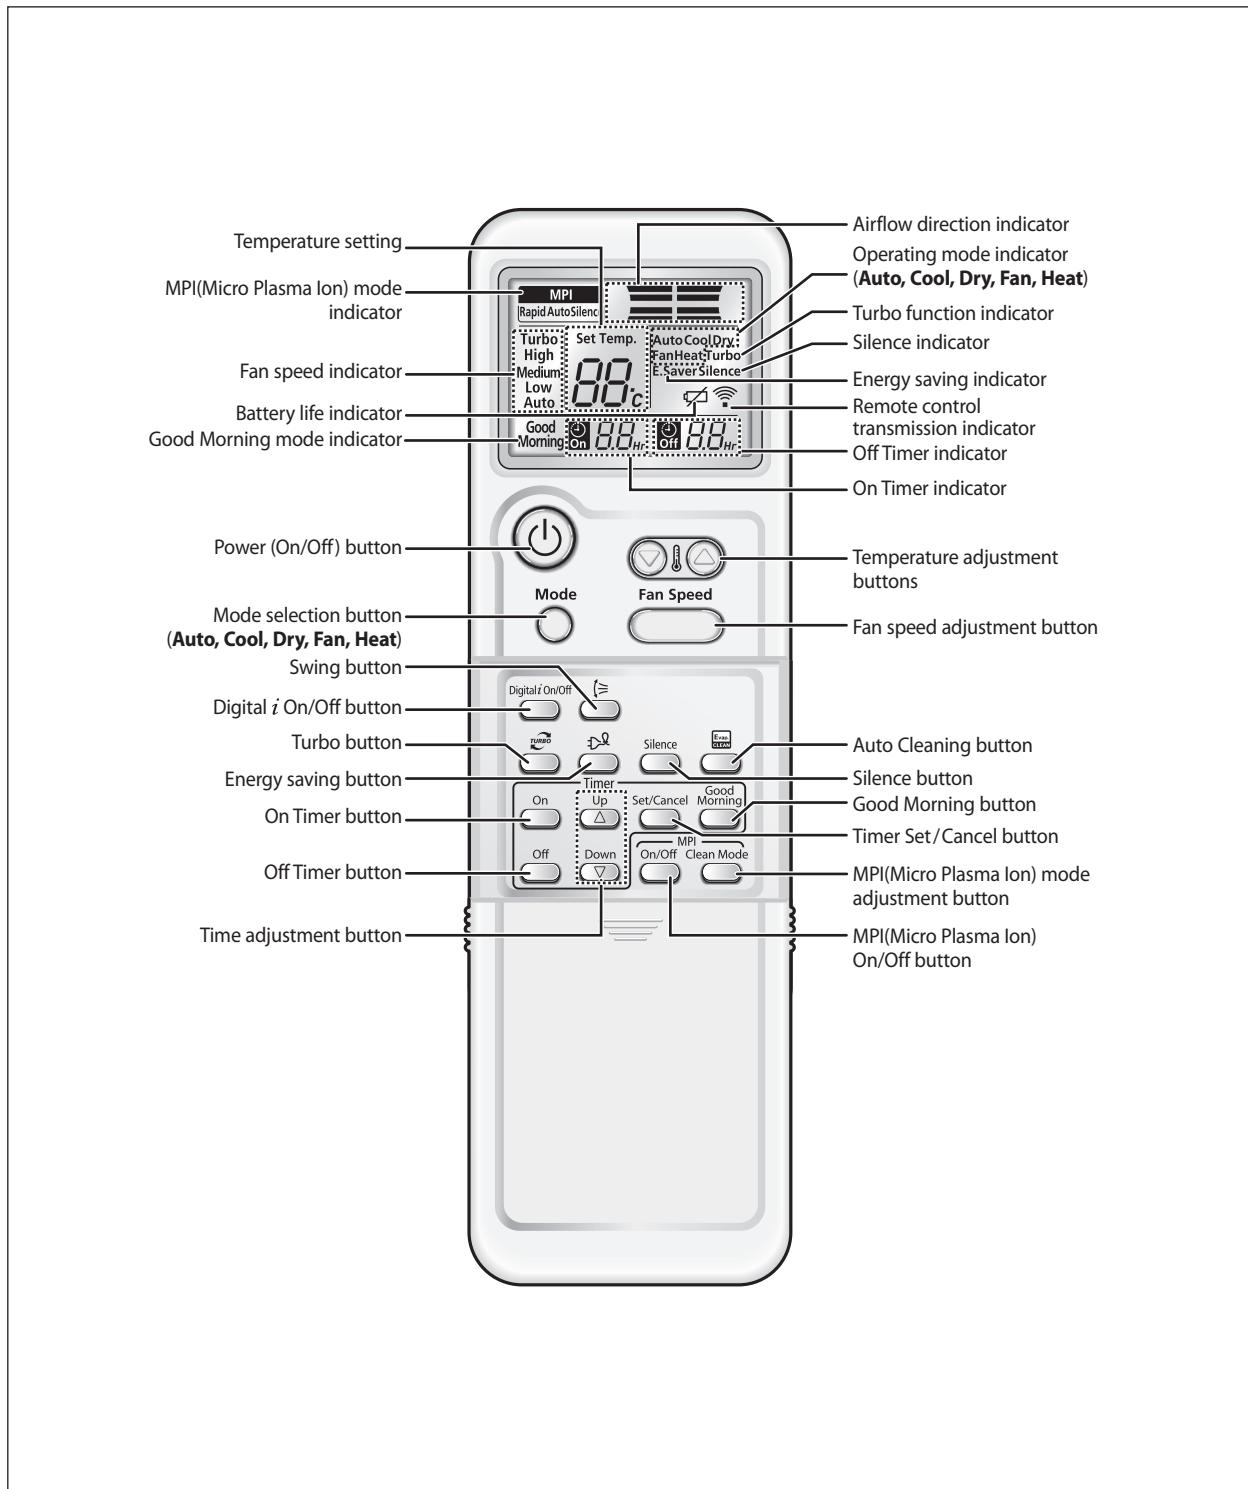


## 11-3 Main Function

### 11-3-1 Basic Function

Mode	Explanation	Remark
<b>Auto Mode</b>	Press the  button on the remote control until <b>Auto</b> is displayed.	
<b>Cool Mode</b>	<p>Press the  button on the remote control until <b>Cool</b> is displayed.</p> <p>Press the  button to select the fan speed until the required setting is displayed.</p> <p><b>Auto</b> → <b>Low</b> → <b>Medium</b> → <b>High</b></p>	 
<b>Heat Mode</b>	<p>Press the  button on the remote control until <b>Heat</b> is displayed.</p> <p>Press the  button to select the fan speed until the required setting is displayed.</p> <p><b>Auto</b> → <b>Low</b> → <b>Medium</b> → <b>High</b></p>	 

## Basic Function(cont.)

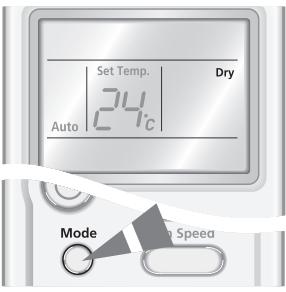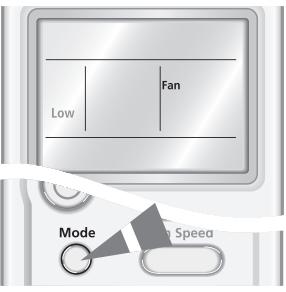Mode	Explanation	Remark
<b>Dry Mode</b>	Press the  button on the remote control until <b>Dry</b> is displayed.	
<b>Fan Mode</b>	Press the  button on the remote control until <b>Fan</b> is displayed.	

## 11-3-2 Applied Function

Mode	Explanation	Remark
<b>Good Morning Mode</b>	Press the  button. ◆ The timer indicator is displayed. ◆ The Off timer is blinking on the remote control.	
<b>Silence Mode</b>	Press the  button.	
<b>MPI Mode</b>	Press the  button. ◆ The air conditioner starts up in MPI-Auto mode automatically. ◆ The MPI mode also runs when the air conditioner is turned on. ◆ By pressing the  button again, the MPI mode is canceled.	